


- D Montageanleitung
 E Mounting Instruction
 HR Uputi za upotrebu
 SLO Navodlilo za monta o kadi
 HU Útmutató a zuhanykabin beszereléséhez
 RO Instrucțiuni de montaj
 CZ Návod k montá I vany
 SK Návod na montáž
 TR Montaj Klavuzu
 BG Инструкции за монтаж

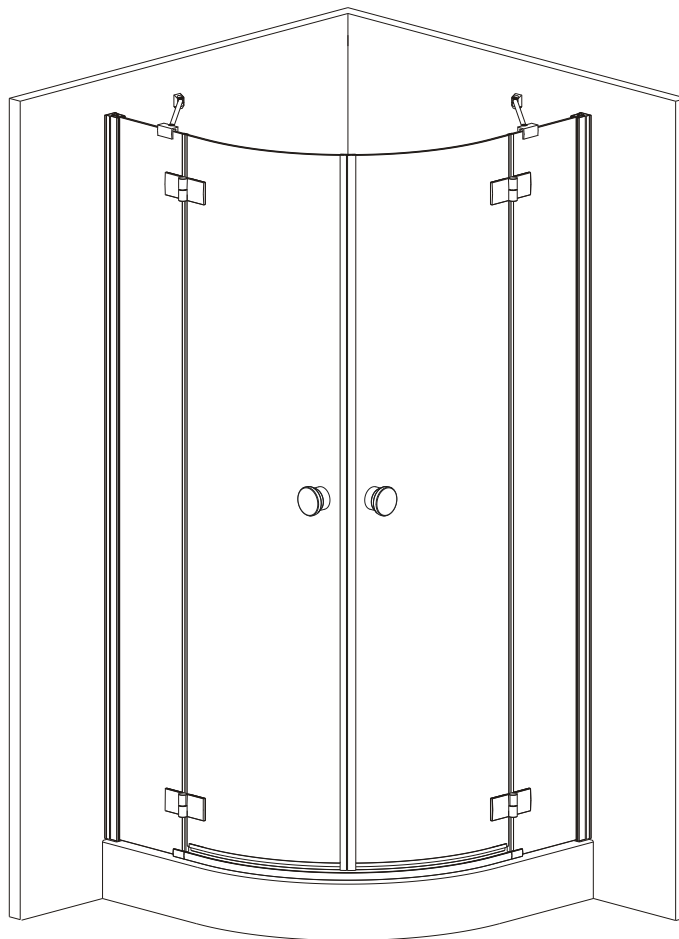

Symbol foto


Sanotechnik
 Handelsgesellschaft m.b.H.
 Industriestraße 5
 A-2752 Wöllersdorf
 Tel.: 0043/2622/421 93-0
 Fax. 0043/2622/421 93-6

Email: office@sanotechnik.at
www.sanotechnik.com


Sanotechnik RUMÄNIEN S.R.L.
 Tancabesti, DN 1, KM 26,5
 Com. Snagov, jud. Ilfov
 Tel.: +40 21 350 13 43
 Fax: +40 21 350 13 44

office@sanotechnik.ro
www.sanotechnik.com


SANOTECHNIK d.o.o.
 Stritarjeva ulica 24
 SI-2000 Maribor
 Tel.: +386 2/421 33 50
 Fax: +386 2/421 33 58

info@sanotechnik.si
www.sanotechnik.com


SANOTECHNIK Hungária Kft.
 HUNGARY
 Nagytétényi út 112
 H-1222 Budapest
 Tel.: +36 1/424 06 70
 Fax: +36 1/424 06 79

info@sanotechnik.hu
www.sanotechnik.com



SANOTECHNIK Maurod s.r.o.
 SLOWAKIA+CZECHIA
 Sládkovičova 69
 SK-953 01 Zlaté Moravce
 Tel.: +421/376 426 245
 Fax: +421/376 426 246

maurod@maurod.sk
www.sanotechnik.com





















Sun Banyo
TURKEY
 Bostanci Mag. Bagdat
 cd.yomca apt.No,504/5
 KADIKOY/ISTANBUL
 Tel: +90 216 384 6179
 Fax: +90 216 384 6180
umut@sanotechnik.com.tr


FORMATIC Ltd.
 BULGARIA
 3, Georgi Benev St.
 BG-4003 Plovdiv
 P.O. BOX 85
 Tel.: +359 32/9611 01
 Fax: +359 32/9611 02
Office@sanotechnik.bg




◆ Assembly Drawing






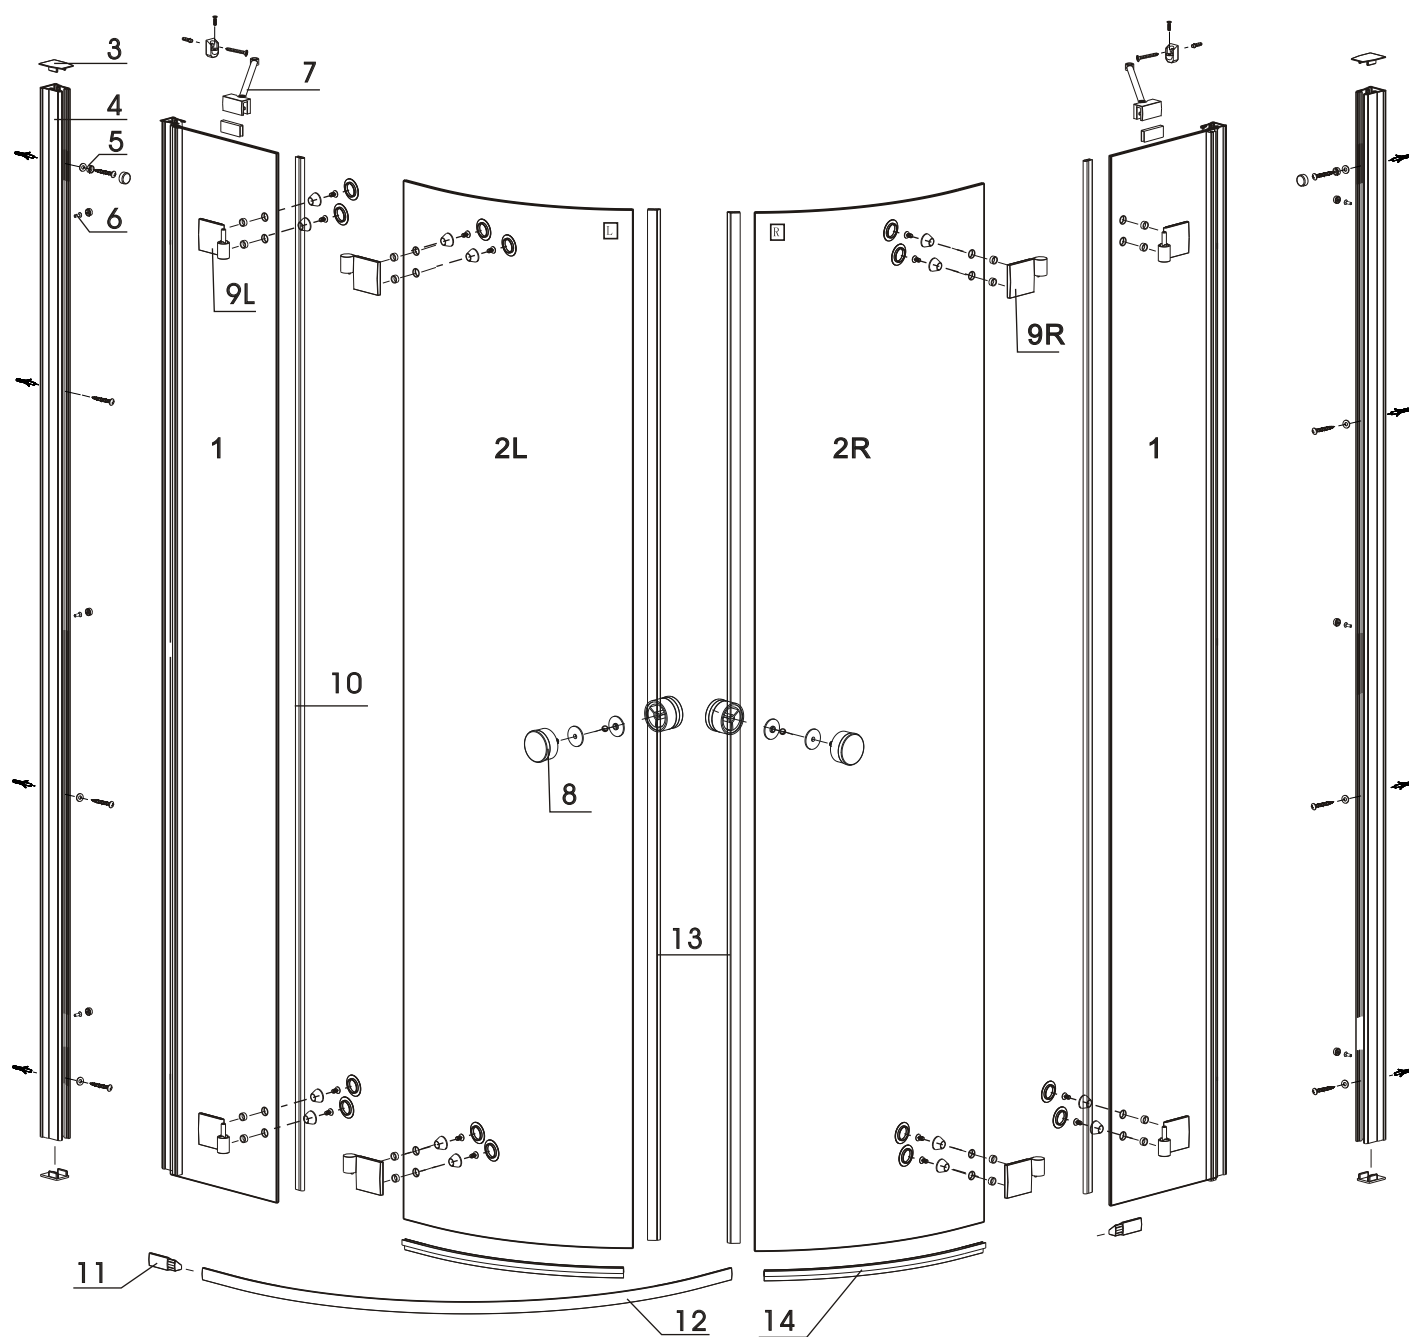







◆ Box Contents






	     	
1		X2
2L		X1
2R		X1
3	 	X2
4	 	X1
5	      	X8
6	     	X6
7	   + 	X2
8	 	X1
9L	    + 	X2
9R	   	X2
10	 	X1
11	 	X2
12	 	X1
13	 	X1
14	  	X1












◆ Installation Steps

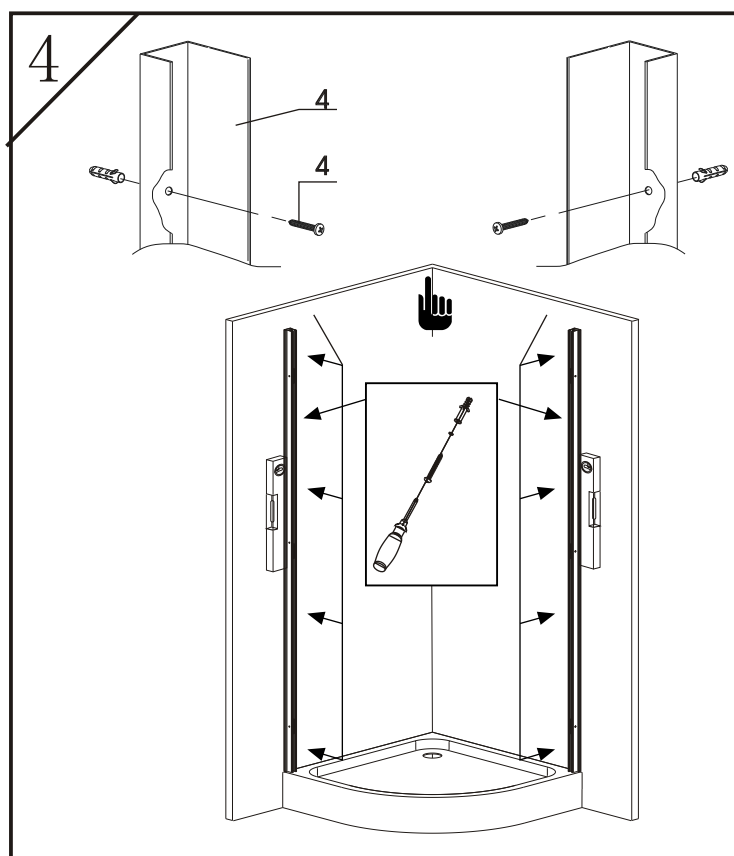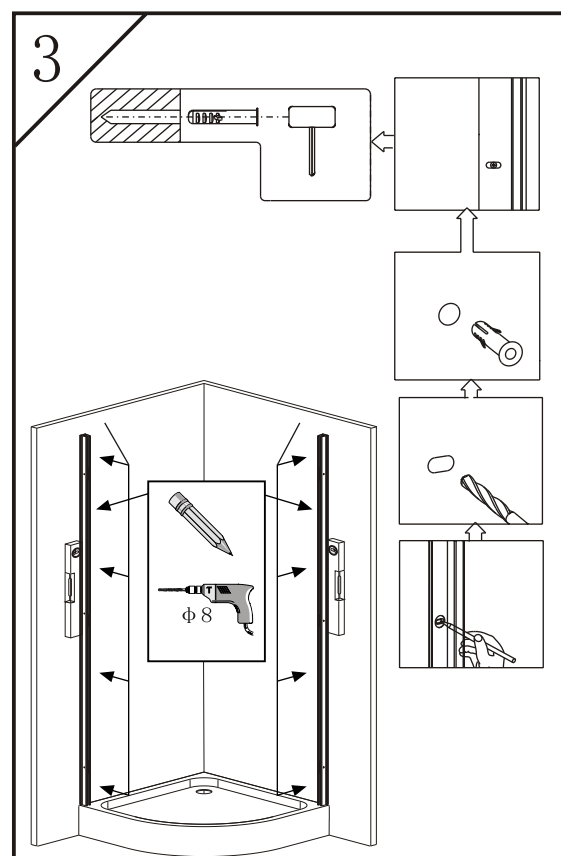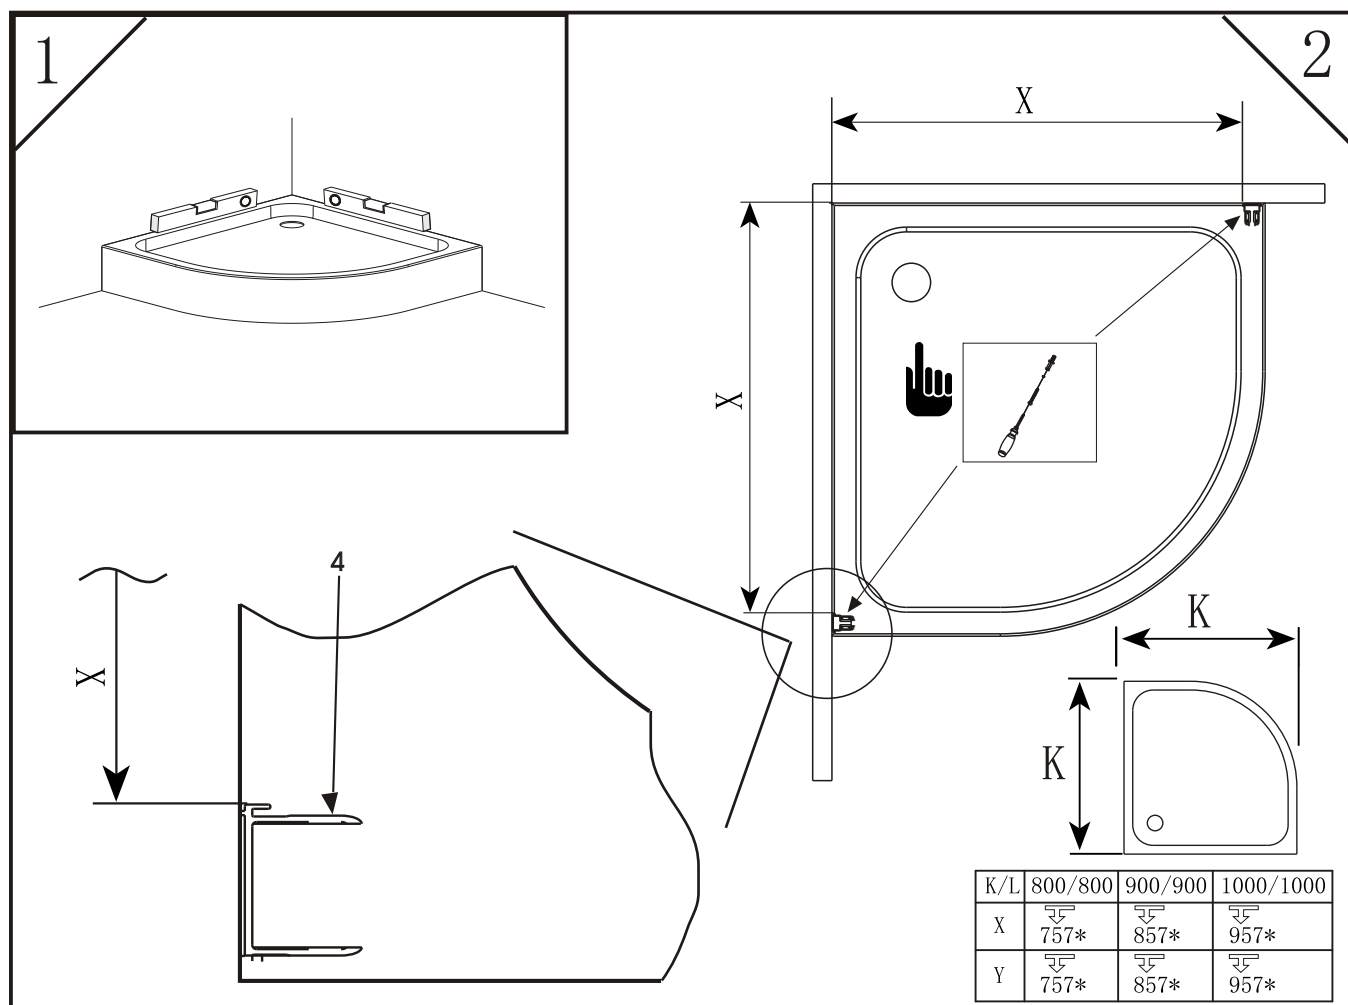

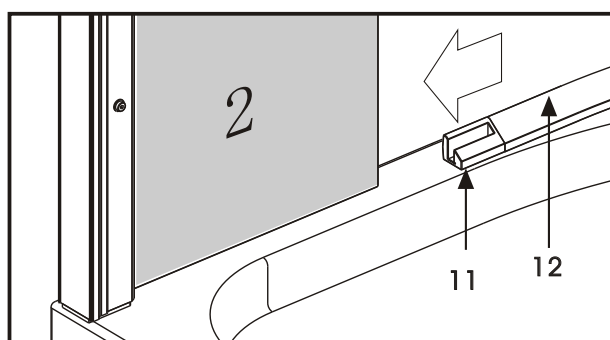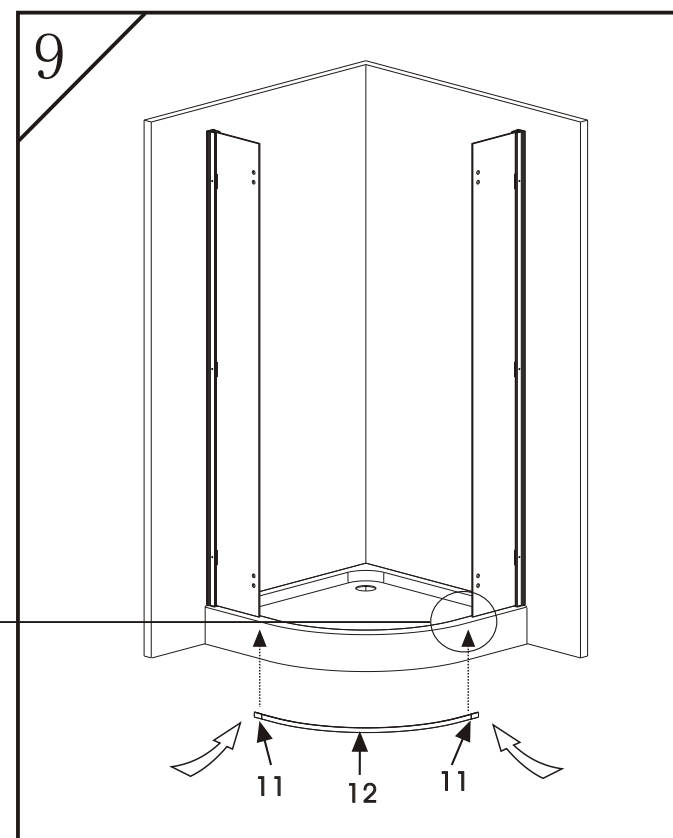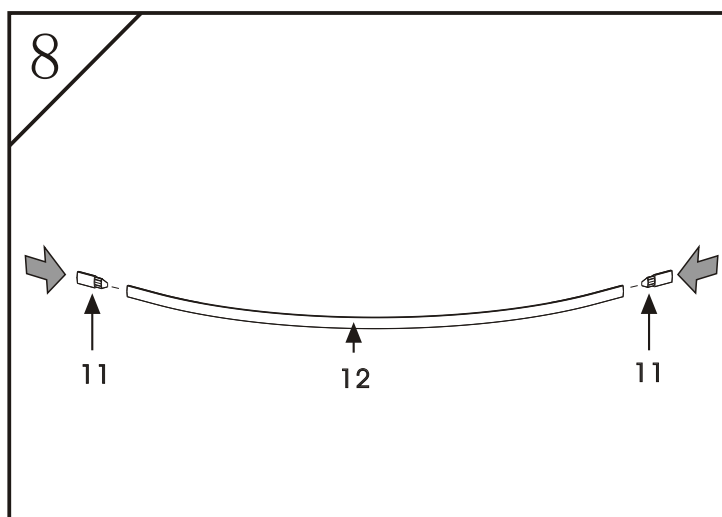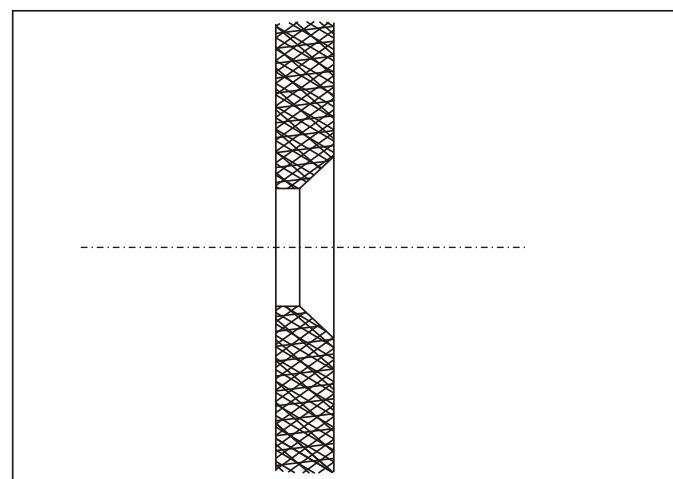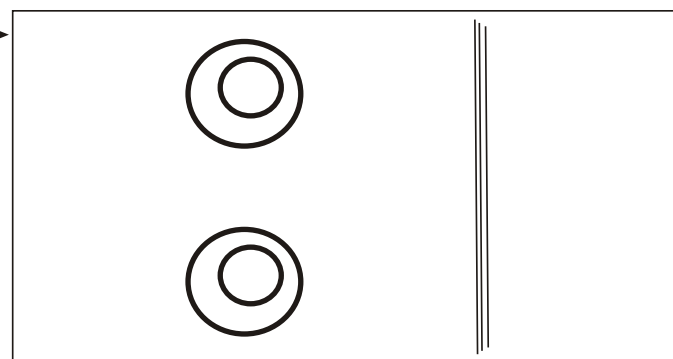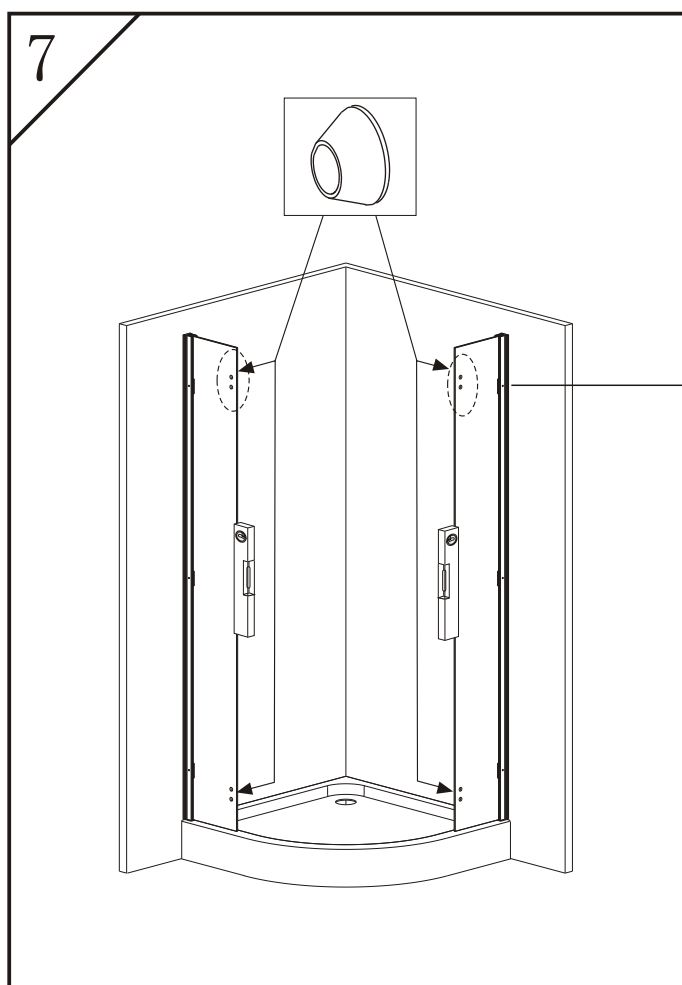


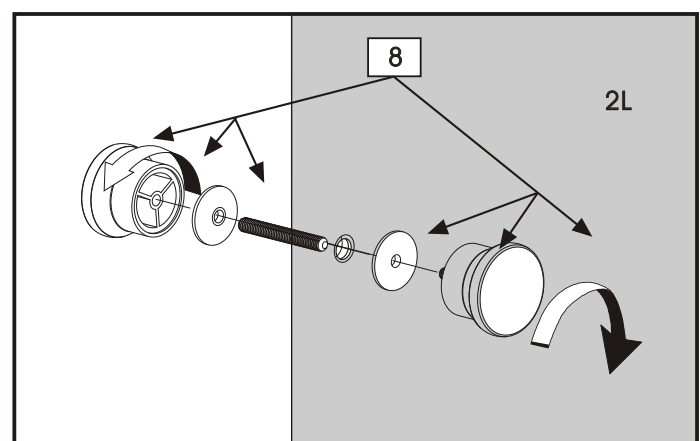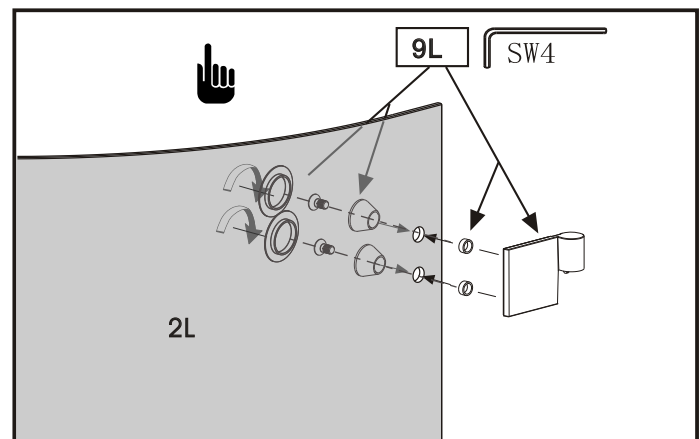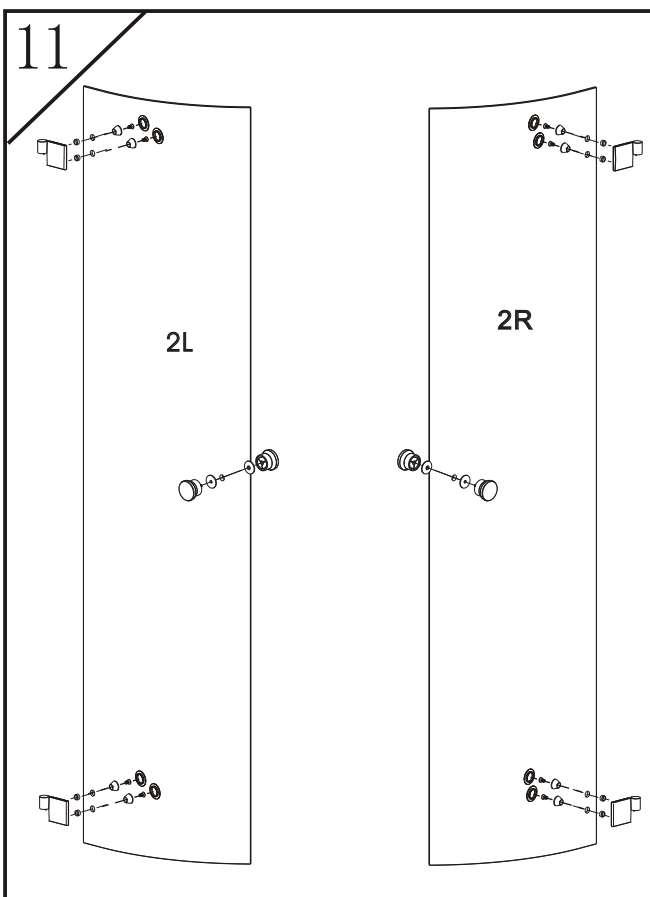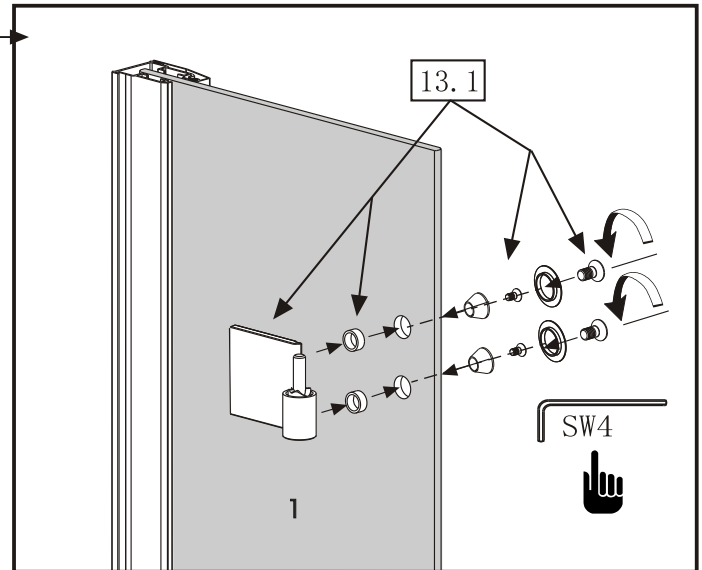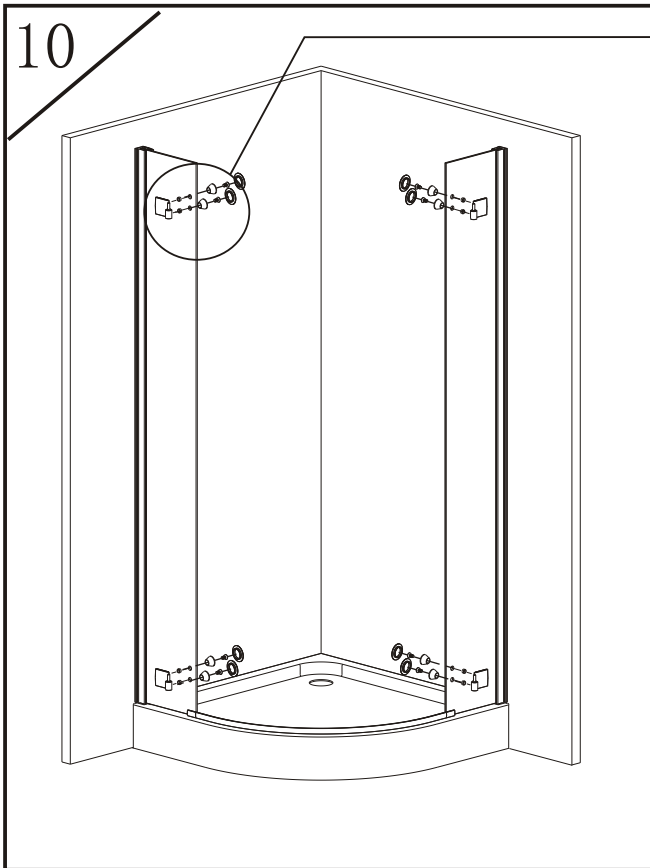

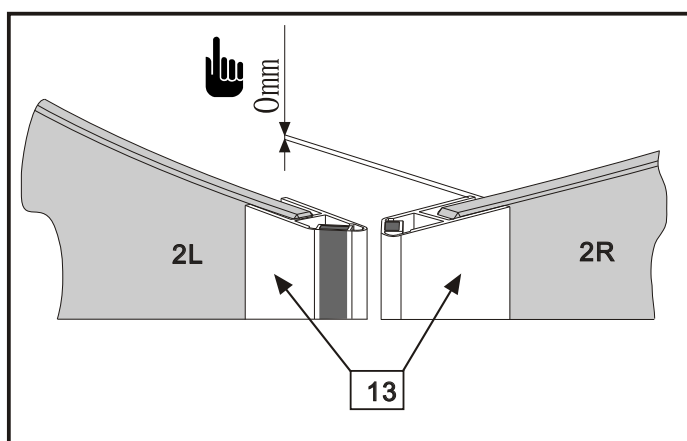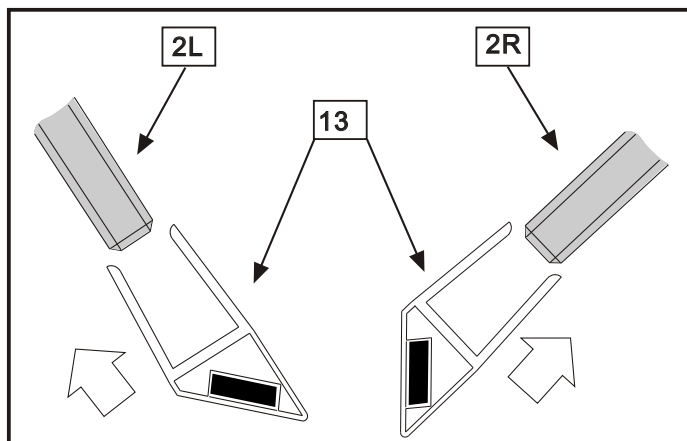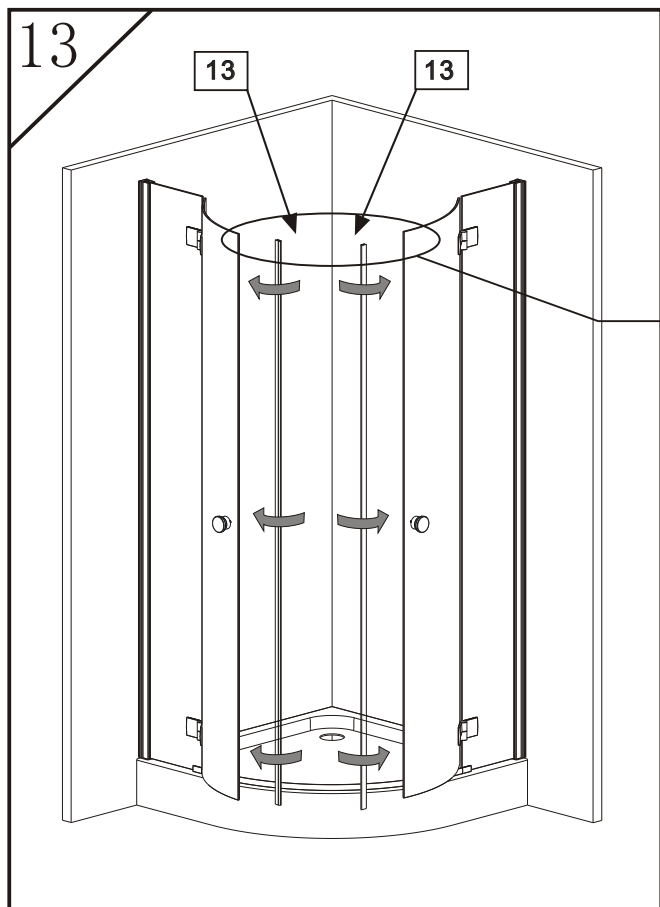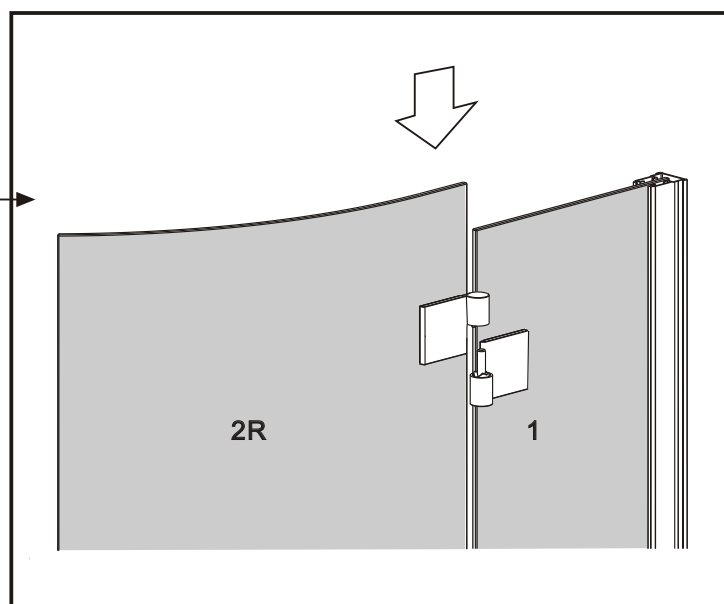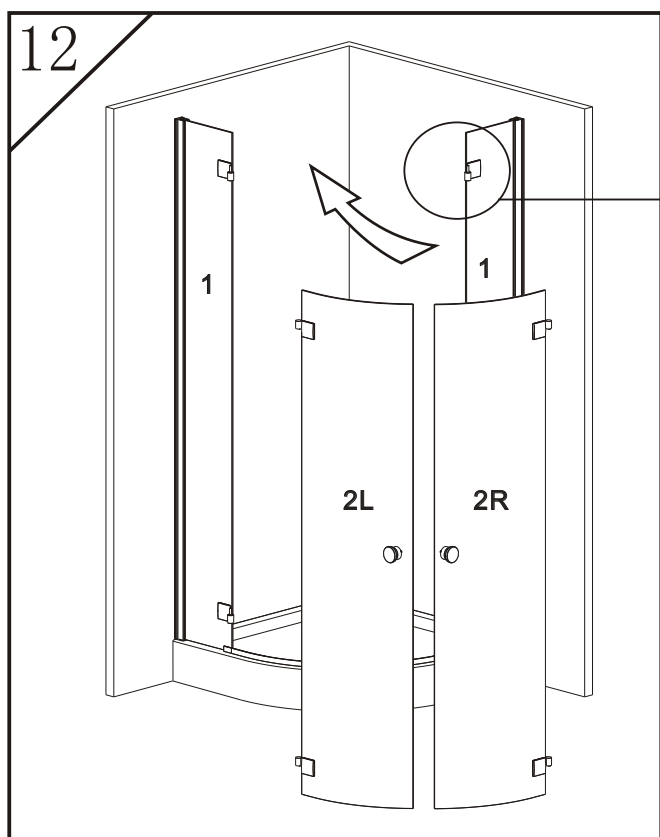


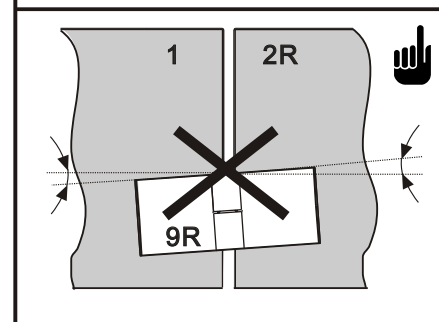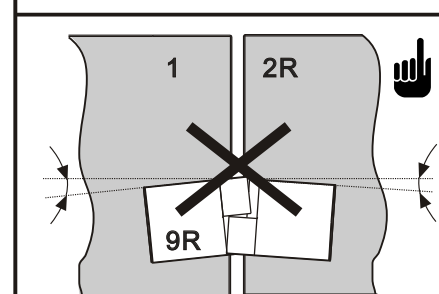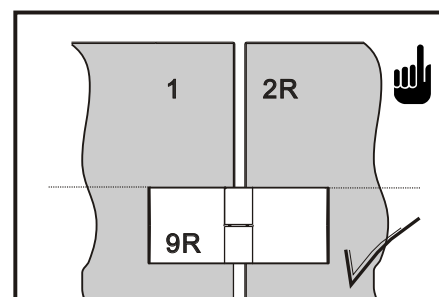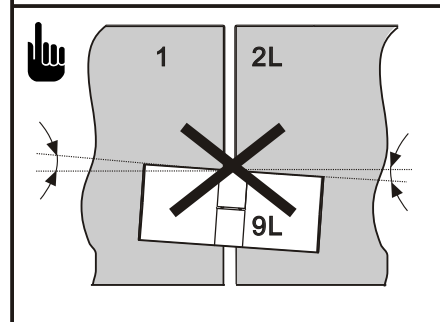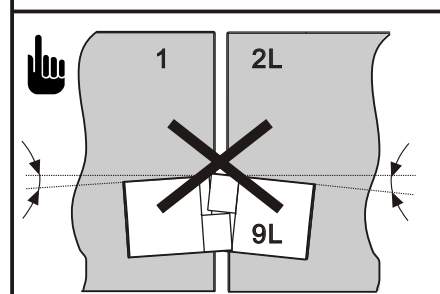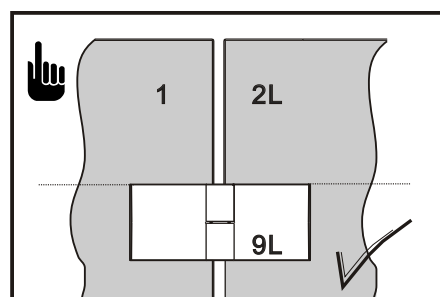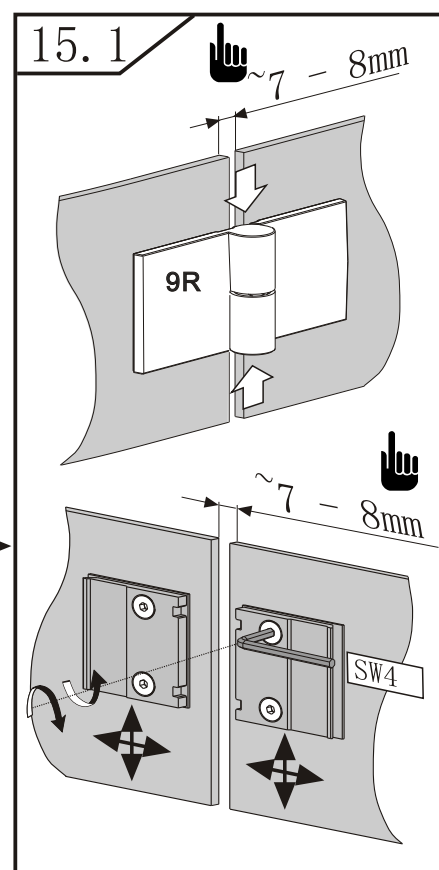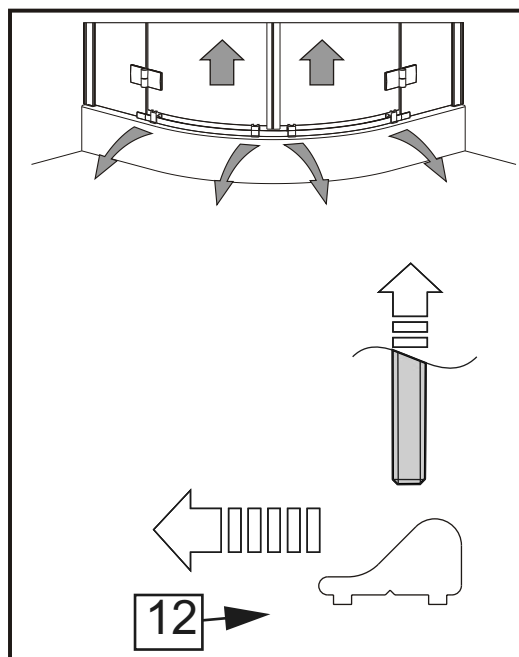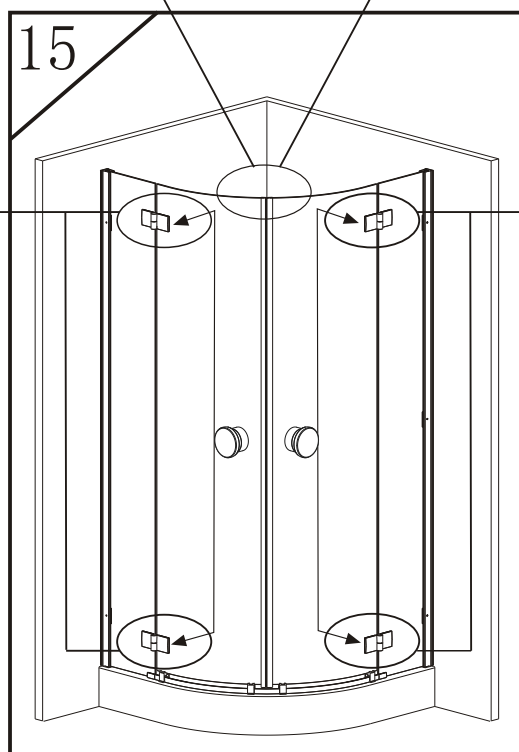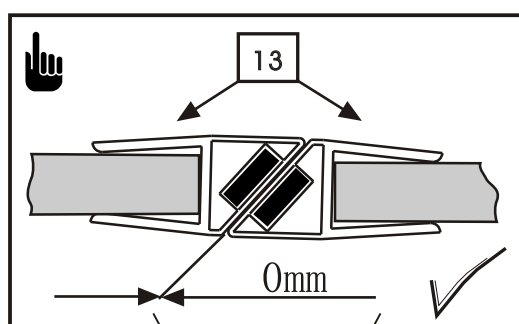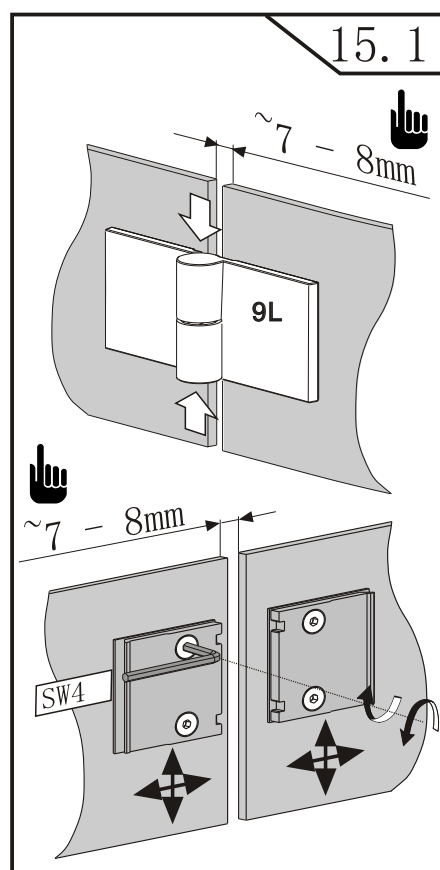


16.1

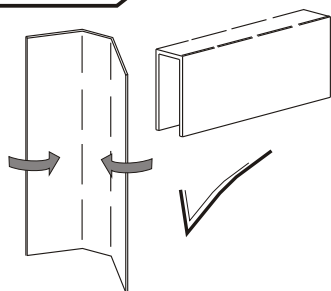


16.3

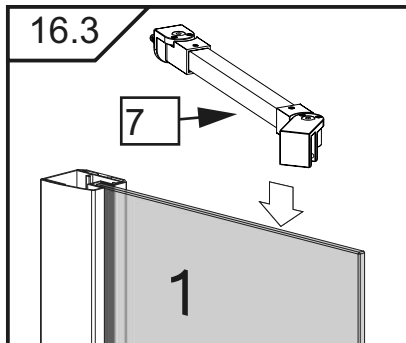


16.4

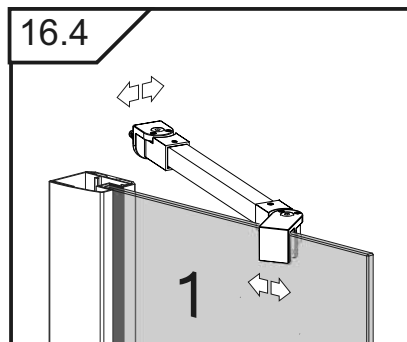


16.2

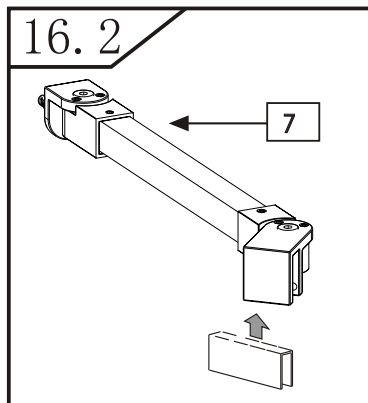


16.5

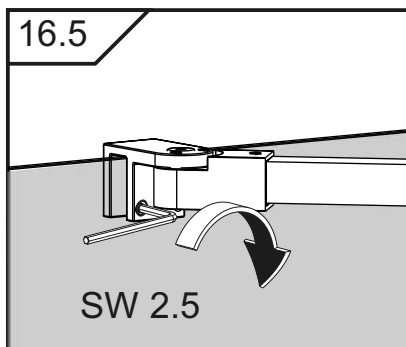


16.6

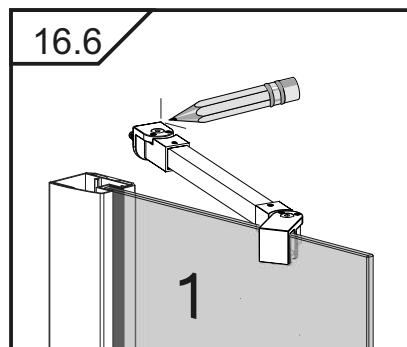


16.7

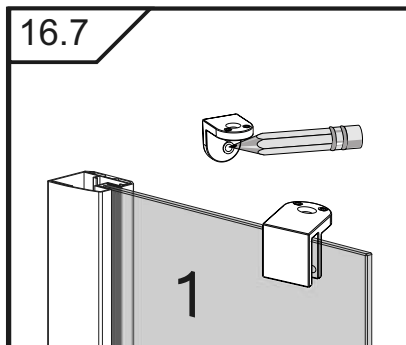


16.8

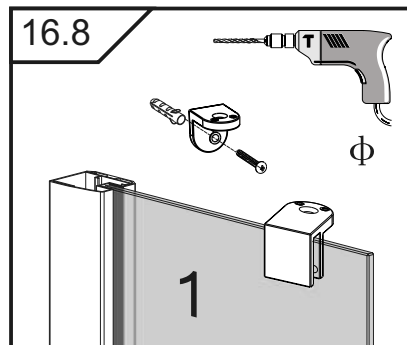


16

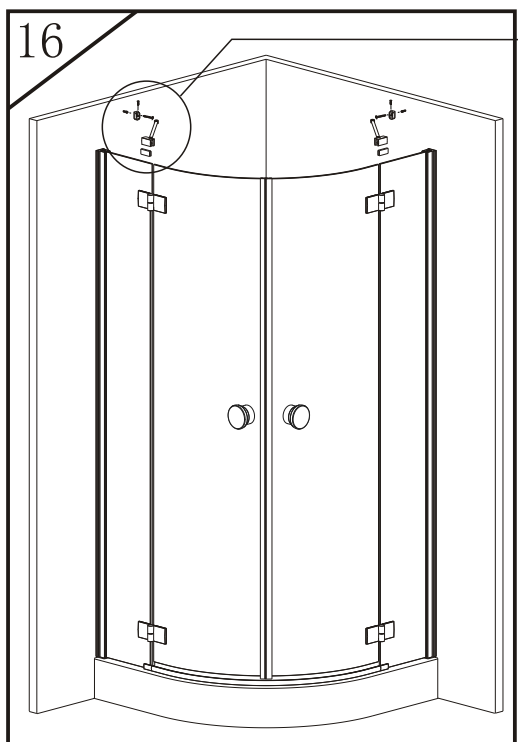

16.9

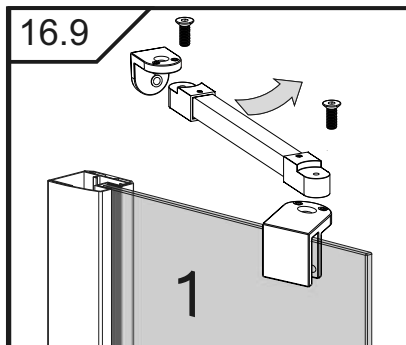

16.10

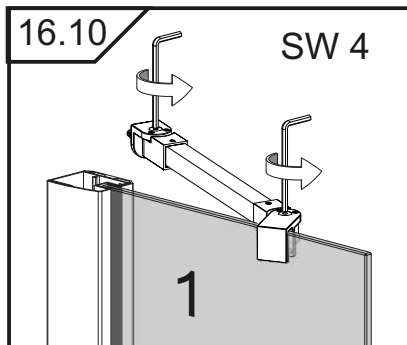

16.11

